


# BeMə Accufiller

Manual

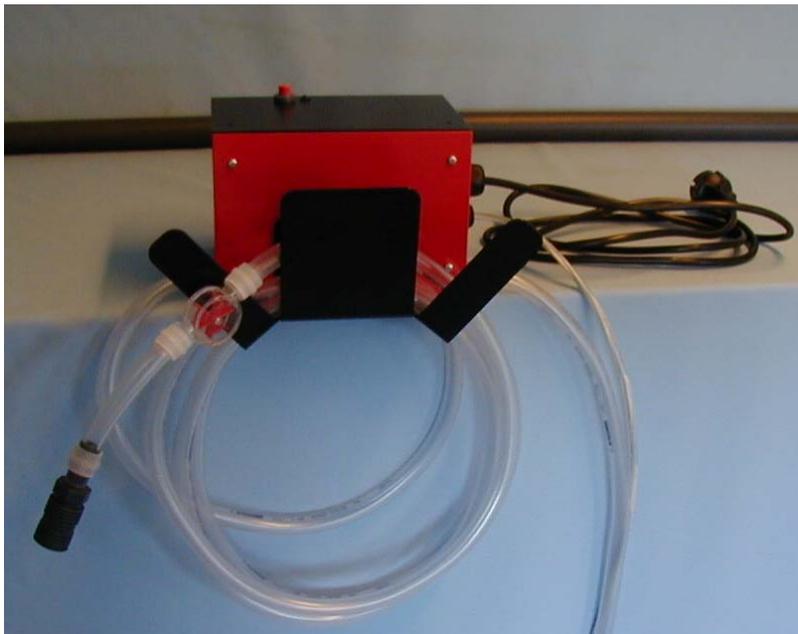

## Water filler

For central water filling

Model no.:

12-30

# Instructions for use

---

## Mode of operation:

1. Check whether there is enough water in the can for a complete filling otherwise fill it up.
2. Install the hose connector to the battery's connector.
3. Start the pump by turning on the switch. Check whether it is connected to the power.
4. Check whether the flow indicator shows that the filling has begun
5. Stay with the machine until the indicator shows that the filling is complete
6. Switch off the pump and disconnect the power.

## Technical data

---

### Pumps:

Network connection	230 V AC 50 - 60 Hz.
Maximum power	25 Watt
Primary fuse	0.25 A A/250 V. 5 x 20 mm.
Secondary fuse	2 A/250 V. 5 x 20 mm
Max. power consumption	0.1 A
Pump capacity	4 l per minute at low pressure
Maximum pump pressure	0.45 bar (equivalent to 5 m water column)

## Warning

---

- Use only clean battery water.
- Do not store the machine at temperatures under 0 C.
- Do not leave the machine unattended during filling. It is not good for the pump to run after the filling is finished.

# Structure

---

