

P5-ST-22



START TRUCK



LED CHARGE INDICATOR

The test button allows users to easily check the charge level of the booster and test the alternator of a vehicle.

12-24V CONNECTORS

These easy to use connectors allow the booster to be changed from 12 to 24V.

INBUILT SAFTEY FUSE

Pure brass clamps with braided connection protected by a saftey fuse.

RIBBED ABS CHASSIS

Reinforced internal structure provides strength and durability making a dependable chassis.



12/24V

Model	Volts	Peak Amps (A)	Starting Amps (A)	# Of Batteries	Location of Fuse	Fuse (A)	Dimensions (cm)	Cable Diameter (mm²)	Cable Length (cm)	Unit Weight (KG)	Charger Voltage (V)	Charger Amps (A)	Vehicle Types
P5-ST-22	12/24V	5000/2500	1700/850	2	Clamp	500	33x37x22	50	170	20	230	3	